



# Lo-Pro Track Installation Instructions

## Package Contents:

- (4) U-clips
- (4) Sliding Rack Anchors
- (2) Roof Tracks
- (2) Track Bottom Gaskets
- (2) Track Top Covers
- (4) Track End Caps
- (12) #10 X 5/8" Wax Tip Drill Screws
- (4) 1/4-20 X 3/8" Button Head Screws
- (4) Sliding Anchor Covers
- (6) Sliding Tie Downs




**Note:** For proper width placement of roof tracks, an optional crossbar template or roof rack crossbar kit should be used for installation.

1.




Attach U-clips to the four sliding anchors. ⚠ Make certain the u-clips are oriented as shown.

2.

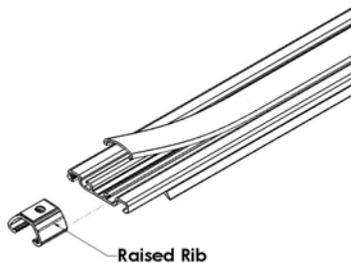


Remove the top gasket on each track. Slide two crossbar anchors onto each track. The sides marked with the raised ribs should face each other.

3.

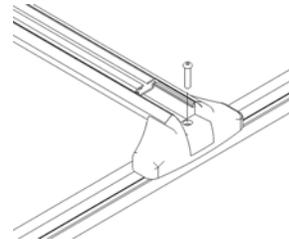


This step is performed on a workbench or floor, not on a vehicle. Lay the tracks side by side with the raised rib sides of the anchors facing each other. Use a crossbar kit or template to correctly space the tracks. Using 1/4"-20 X 1-1/4" button head screws (supplied with crossbars) secure each crossbar through an anchor to the track. Crossbars are used only to position the track and will be removed later.

4.

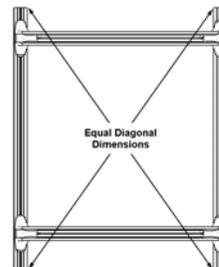

Ensure that the assembly is square by taking diagonal measurements from corner to corner. When the measurements are equal, fully tighten the crossbars to the tracks. Place the assembly on the roof and position using the suggested dimensions in step 5.

## 5. Suggested Dimensions

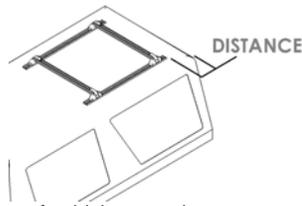

Distance from rear of vehicle to tracks:

- Full Size Van 8" – 10"
- Full Size Sport Utility 4" – 6"
- Mini Van 2" – 4"
- Small Sport Utility 2" – 4"
- Truck Cap 8" -10" or centered

## 6.

Mark the four corner hole locations using a center punch. Remove assembly from the roof. Remove crossbars and anchors from tracks.

## 7.



Center the bottom gasket on each track (approx. 1-3/16" from each end). Reposition the tracks on the roof over the punch markings. Attach the tracks to the roof using drill screws in all mounting holes **except the end positions**. Silicone can be used to prevent leaking.

## 8.




Snap the top track covers into place.

## 9.


Slide the three track tiedowns and two crossbar anchors onto the track, alternating tiedowns and anchors.

## 10.

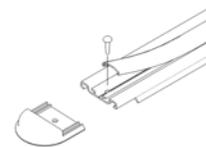

Pull back the top track cover at each end. Slide the end caps on and secure by using the remaining drill screws.

## 11.

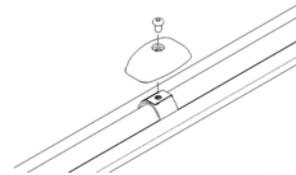

Install the crossbar anchor covers using 1/4-20 X 3/8" button head screws.

## PRO RAC GUIDELINES

Please review the instructions and warranty carefully. Assembly and installation are the purchaser's responsibility and beyond ProRac's control. Therefore, ProRac exclusively limits its warranty to the repair or replacement of a defective ProRac product for up to three years from retail purchase. Warranty excludes damage to your vehicle, cargo, or any person or property during assembly, installation, and use.

- ◆ Do not carry more than 150 pounds (68KG) of combined cargo and accessories on ProRac crossbars. ProRac crossbars do not increase gutter or roof strength. ProRac cannot warranty loads that exceed this limit.
- ◆ Do not use ProRac crossbars and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity. Failure to follow these guidelines or the product instructions will void the warranty.
- ◆ Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened, and locked before every trip. All fasteners must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during long trips to ensure continued fastening security.
- ◆ Check all local and state laws governing projection of objects beyond the width and length of vehicle. Be aware of the width and height of your cargo since low-clearance branches, bridges, and parking garages can affect the load. Never drive with any lock, knob, or rack in an open or unlocked position. All long loads such as, but not limited to, sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks of the vehicle.
- ◆ Remove your rack and accessories when they are not in use and before entering automatic car washes.
- ◆ All locks must be turned and moved periodically to ensure smooth operation. Use graphite or similar dry lubricant. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended. Replacement keys are available only through your ProRac dealer.
- ◆ All cargo will affect the vehicle's driving behavior. For your safety, adapt your speed to the conditions of the road and load being carried. Obey all posted speed limits and traffic cautions.
- ◆ Due to their wind resistance, do not carry disks or wheels with covers on the ProRac bike carrier.
- ◆ Consult your ProRac dealer if you have questions regarding the operation and limits of ProRac products. Review all instructions and warranty information carefully.